

How to use the application

Having access to the NSensor web page, the user can select a sensor node and view the last acquired data (Fig. 1).

To access the logged data, the user has to login, defining a username and password. Once logged, the user can access the Device List button (Fig. 2) to view the details of the required sensor node. In this page, the user can also have access to the datasheet of each used sensor. In the screen of the selected sensor node, the user can select which sensor data to view and the start and end date of the data log (Fig. 3). The data is then presented in a table format and the user can download the data to a CSV file format for further analysis (Fig. 4)

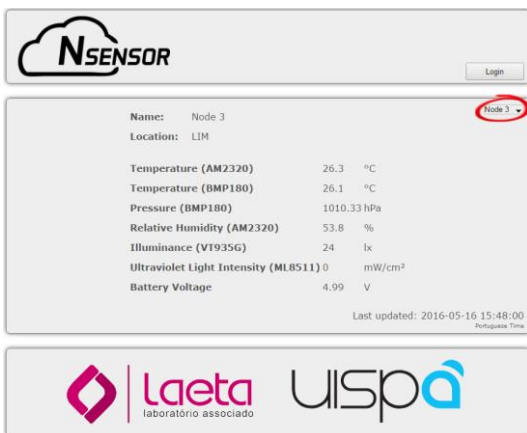


Fig. 1 – Selection of sensor node

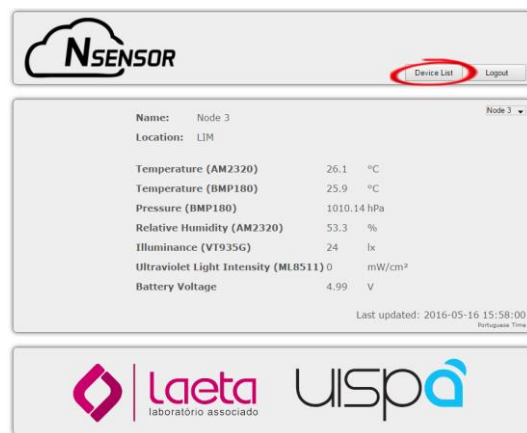


Fig. 2 – Access to Device List

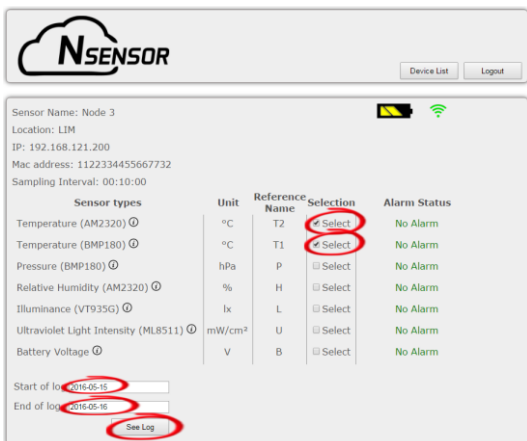


Fig. 3 – Selection of sensors and time period

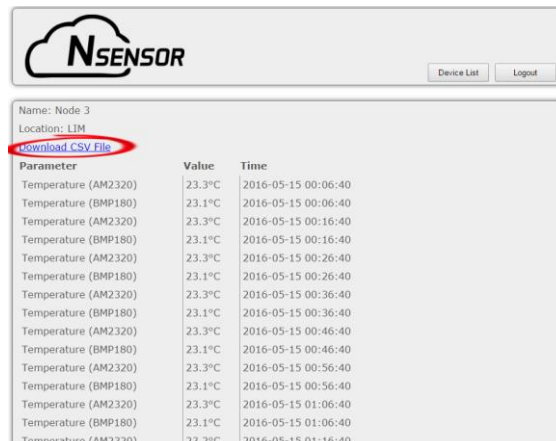


Fig. 4 – Sensors data